

## User Guide

### 4 Zone Dimming and CCT RF Remote Controller

---

#### Feature

- Apply to single color or dual color LED controller, dimming driver or smart lamp.
- Ultra sensitive color adjustment touch wheel.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Each remote can match one or more receiver.
- Battery powered (2 x AAA).
- Operate with LED indicator light.

#### Technical parameter

- |                                   |                                   |
|-----------------------------------|-----------------------------------|
| • Output signal: RF(2.4GHz)       | • Remote distance: 30m            |
| • Working voltage: 3VDC(AAA*2pcs) | • Working temperature: -30°C~55°C |
| • Working current: < 5mA          | • Dimension: L155×W43×H17.5mm     |
| • Standby current: < 10μA         | • Weight: 156g                    |
| • Standby time: 2 years           |                                   |

#### Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

#### Match guide

Remote match with 2.4G RF controller, dimming driver or smart lamp. there are two kinds of method to match receivers.

##### • Use Match key

###### Match with controller(with match key)

1. Match: Short press match key, within 5s, press on/off key or zone key of the remote.
2. Delete: Long press match key for 5s, delete all matched remote.
3. Multiple zone remote only use zone key to match each zone receiver.

##### • Use Power-up

###### Match with controller(without match key), dimming driver or smart lamp

1. Match: Switch off the power, then switch on power again, short press on/off key or zone key 3 times on the remote quickly within 5s after power on, the link is done once the light blinks 3 times.
2. Delete: Switch off the power, then switch on power again, short press on/off key or zone key 5 times on the remote quickly within 5s after power on, the unlink is done once the light blinks 5 times.
3. Multiple zone remote only use zone key to match each zone receiver.

# RS6

Technische Fiche



 
**DU PONT**  
HANDEL EN MAATWERK

## Key function

### • RS1: 4 zone dimmer remote



### • RS2: 4 zone color temperature remote

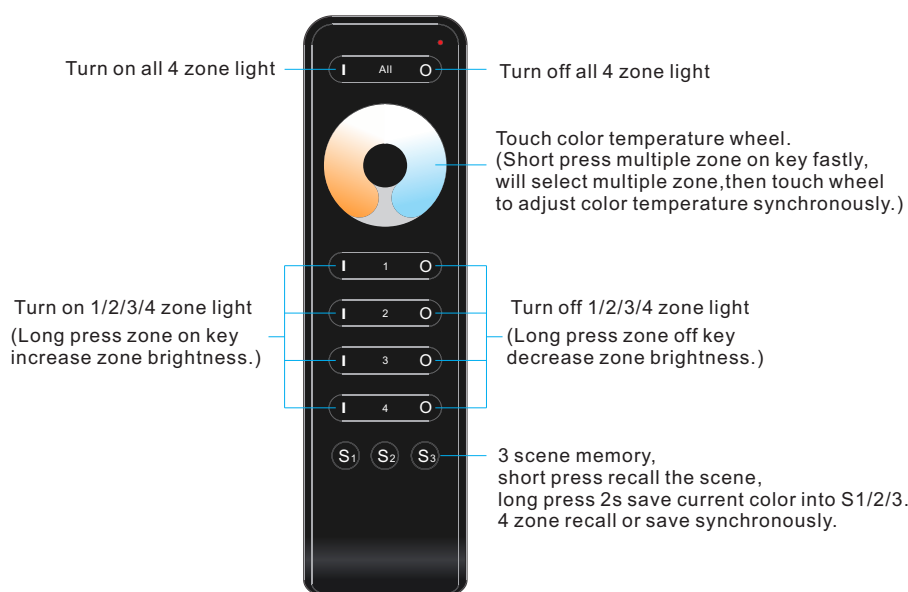

# RS6

## Technische Fiche



 
**DU PONT**  
HANDEL EN MAATWERK

### • RS6: 4 channel dimmer remote



**Note:** RS6 match with 4 channel receiver only, such as V4, each channel connect with one single color LED strip.

### Dimension

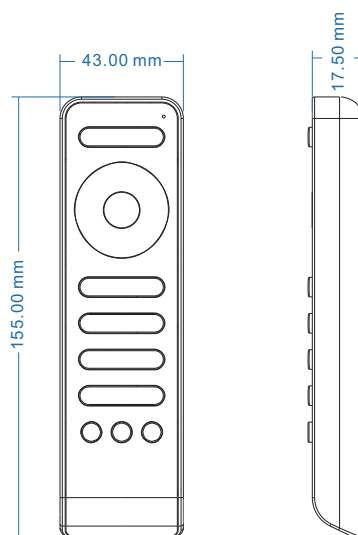

### Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.  
A long time without the remote control, remove the battery.  
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.